



GX4000 32 IN ONE MULTIGAMES

Just configure the dip switches as follow and play (please don't change pin switch configuration while the GX4000 is switched on).

GAMES		PINS SWITCH					
		1	2	3	4	5	6
1	Arnold 5 Diagnostic Rom	ON	OFF	OFF	OFF	OFF	OFF
2	Barbarian II	ON	OFF	ON	OFF	OFF	OFF
3	Batman the movie	ON	OFF	OFF	ON	OFF	OFF
4	Blue Angel 69	ON	OFF	ON	ON	OFF	OFF
5	Burnin'Rubber	ON	OFF	OFF	OFF	ON	OFF
6	Crazy Cars II	ON	OFF	ON	OFF	ON	OFF
7	Dick Tracy	ON	OFF	OFF	ON	ON	OFF
8	Fire and Forget II	ON	OFF	ON	ON	ON	OFF
9	Klax	ON	OFF	OFF	OFF	OFF	ON
10	Mystical	ON	OFF	ON	OFF	OFF	ON
11	Navy Seals	ON	OFF	OFF	ON	OFF	ON
12	No Exit	ON	OFF	ON	ON	OFF	ON

13	Operation Thunderbolt	ON	OFF	OFF	OFF	ON	ON	
14	Pang	ON	OFF	ON	OFF	ON	ON	
15	Panza Kick Boxing	ON	OFF	OFF	ON	ON	ON	
16	Pinball Magic	ON	OFF	ON	ON	ON	ON	
17	Plotting	OFF	ON	OFF	OFF	OFF	OFF	
18	Pro tennis Tour	OFF	ON	ON	OFF	OFF	OFF	
19	Puzznic	OFF	ON	OFF	ON	OFF	OFF	
20	Robocop 2	OFF	ON	ON	ON	OFF	OFF	
21	Skeet Shot	OFF	ON	OFF	OFF	ON	OFF	
22	Striker In The Crypts Of Trogan	OFF	ON	ON	OFF	ON	OFF	
23	Switchblade	OFF	ON	OFF	ON	ON	OFF	
24	Tennis Cup II	OFF	ON	ON	ON	ON	OFF	
25	The Enforcer	OFF	ON	OFF	OFF	OFF	ON	
26	Tintin On The Moon	OFF	ON	ON	OFF	OFF	ON	
27	Wild Streets	OFF	ON	OFF	ON	OFF	ON	
28	World Of Sports	OFF	ON	ON	ON	OFF	ON	
29	X-Mas 2008 v2 Demo	OFF	ON	OFF	OFF	ON	ON	
30	Copter 271	OFF	ON	ON	OFF	ON	ON	
31	Rainbow Islands	OFF	ON	OFF	ON	ON	ON	
32	Rick Dangerous	OFF	ON	ON	ON	ON	ON	